


Peterbilt 220 Engine Data Installation Instructions



J1939 Data Connection

The only data access point on the Peterbilt 220 is on the top rear of the engine, beneath the cab. Reaching that point requires two extension cables, part L-016-0628.

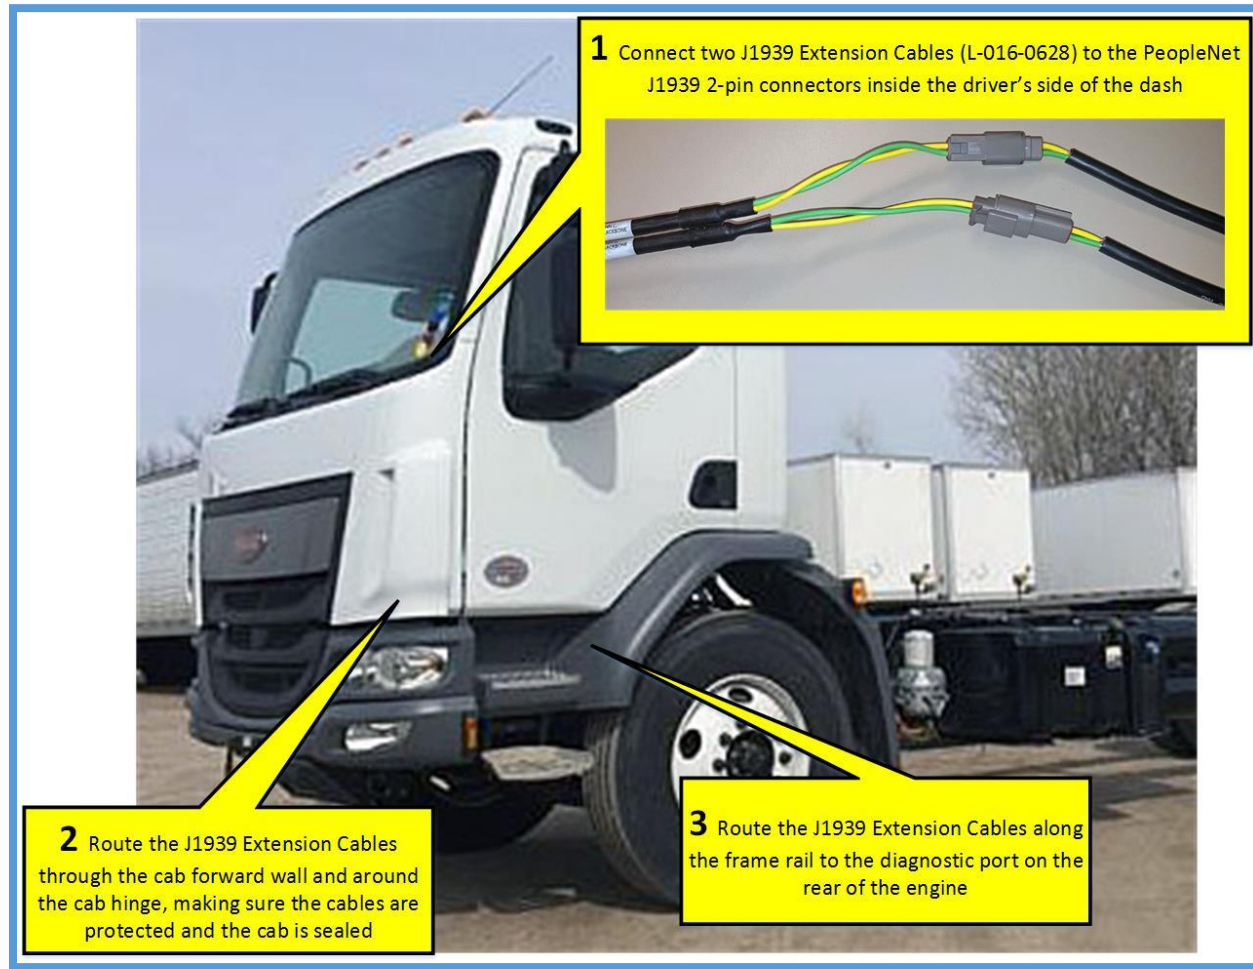

J1939 Data Connection

