

Western Star PeopleNet Power Connections




Add-a-Circuit Connectors

The Western Star power connections will require two Add-a-Circuit connectors, available online or in-store from many electronics and auto parts sources. Make sure to order standard ATC and not the Mini or Low-Profile versions.

Splice the connectors to the PeopleNet Constant Power (red) and Ignition Sense (white) leads and fuse them as shown below.

Splice a 3/8" ring terminal to the PeopleNet Ground (black) wire.

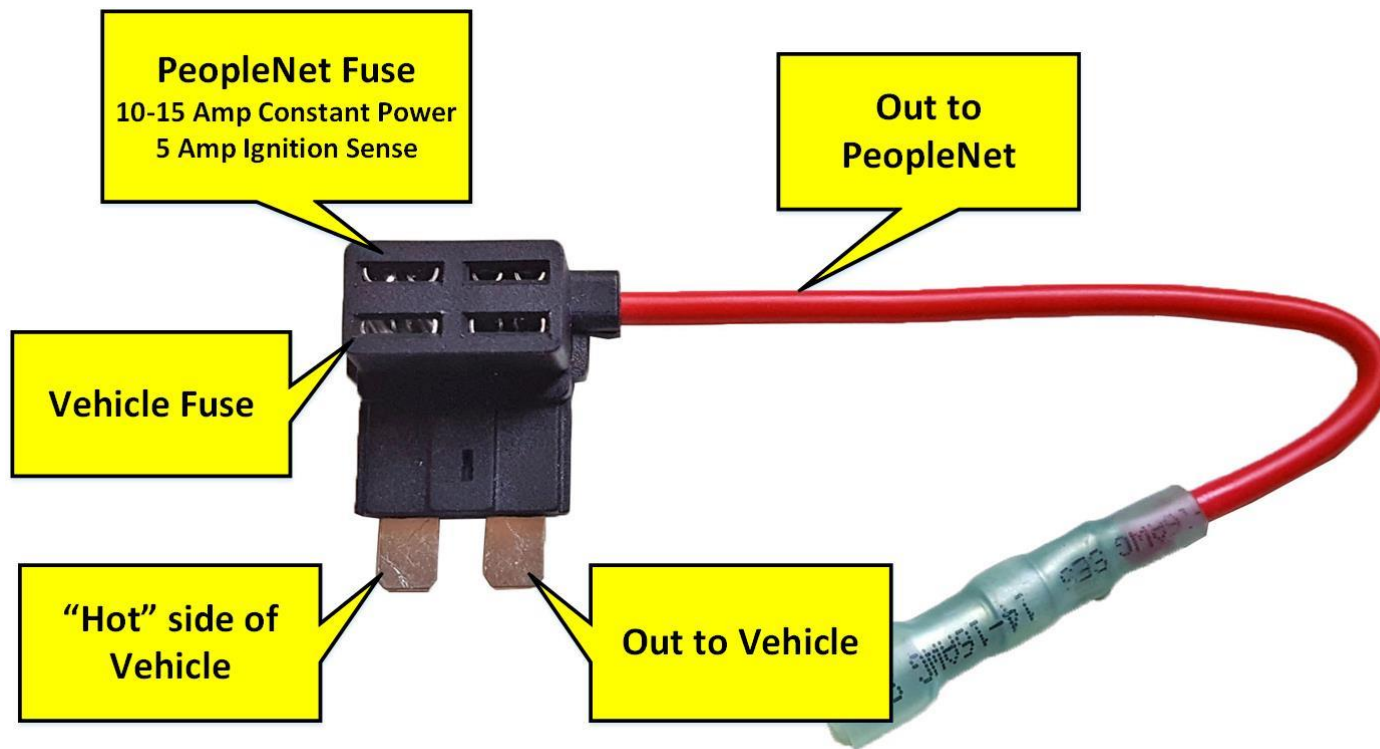

Vehicle Connections

NOTE: Older Western Stars may have unstable grounding due to corrosion of the ground post near the under-the-hood fuse panel. If the display flickers, G3/PMG reboots, or GPS is lost on engine start, clean that ground post.

